



Please read this manual before use and follow its guidance. Keep this manual for future reference.

## Product Overview

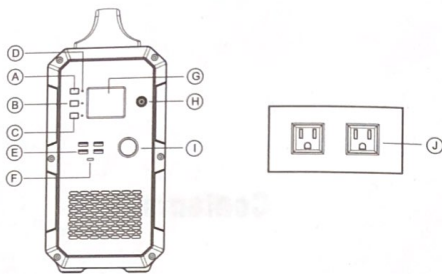

- A. Master power button
- B. DC power button
- C. AC power button
- D. LED indicator lamps
- E. 5V-USB output ports
- F. Type-C PD output port
- G. Display screen
- H. AC charger/PV input port
- I. 12V cigarette lighter socket
- J. AC100-120V outlet US standard socket

## LCD Display

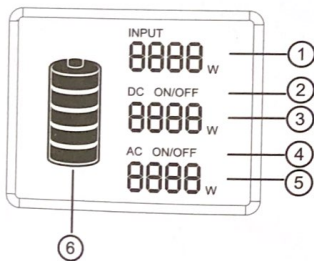

EN-01

- 1. Charging power
- 2. DC ON/OFF status
- 3. DC output power
- 4. AC ON/OFF status
- 5. AC output power
- 6. Battery status indicator

### Note:

1. If the product malfunctions, error codes would be displayed on screen.
2. When product is powered on, but not in use, the product would turn off by itself after 60seconds of inactivity.
3. When the product is powered on and the AC/DC output is turned on, the backlight would turn off by itself after a period of inactivity. To turn on the backlight again, press any button.

## Safety warning


1. please read all the safety warnings before use and keep the manual.warranty does not cover damage caused by failure to follow instructions.
2. Please note the warning labels and operate accordingly.
3. Avoid exposing the product to rain or using the product in humid environment.
4. Do not install the product near heat sources, such as electric furnace and heaters.
5. Place and store the product in a well-ventilated place.
6. Wipe the product clean with a dry cloth.
7. In case of fire, use dry powder fire extinguishers for this product.do not use water fire extinguisher, which may cause electric shock.
8. Please do not alter or disassemble this product.
9. If the generator needs maintenance, please contact the local designated system installation and maintenance personnel or contact seller

## Storage and maintenance

1. operating and storage environment may influence product life and the reliability of performance. Thus, remember to:
  - (1)place the product in a dry and well- ventilated area with mild temperature (suitable temperature:0°C -40°C , suitable relative humidity 10% ~ 90% )
  - (2)place the product in a safe area where it would not be hit or shaken.
  - (3)Keep the product away from corrosive and combustible material.
2. The product would turn off itself when the battery voltage is too low, if this happens, you need to charge the battery within 2-3months.
3. If you are not going to use it for a long time, please charge it fully before storage and then charge it at least once every month, store the product in a dry environment.
4. Please fully charge the product before storage and charge it at least once every 3 months.

EN-02



## Off-grid power storage system

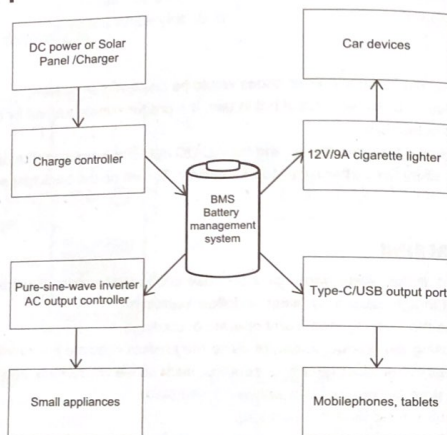

## Packing list

	Item	Number of item
1	Portable solar power generator	1
2	AC wall charger (Including AC input charging cable)	1
3	PV solar charge cable(7909 to MC4)	1
4	User manual	1
5	Warranty card	1
6	Certificate of qualification	1

EN-03

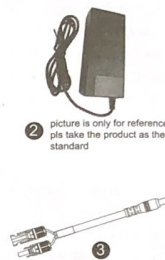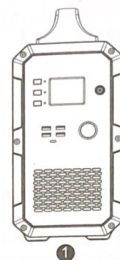

## Operation guidance

### Attention:

1. the operating environment should meet our requirement.
2. Make sure that the air inlet/outlet is not blocked.
3. Please power off the product if you are not going to use it.
4. Please fully charge the product if you are going to idle for a long period.

## How to use the product

### Turn on/off the product

1. turn on the product: press and hold the master power button about 2 seconds to turn on the product. The LED indicator light and the display screen will light up.
2. Turn off the product: press and hold the master power button about 2 seconds to turn off the product. The display screen and the LED indicator light would turn off.

### AC/DC output

**Note:** check to make sure the product is turned on. Otherwise, you can not turn on AC/DC output.

1. Turn on AC/DC output: press and hold the AC/DC power button to turn on the product. The corresponding LED indicator light would light up and the display screen would show "AC ON/DC ON".
2. Turn off AC/DC output: press and hold the AC/DC power button to turn off the product. The LED indicator light would turn off and the display screen would show "AC OFF/DC OFF".

### PV charge activation

Turn off generator, connect PV( or charger)to charge, activate PV charge function ,the

EN-04

first column on screen will be lit up and show input power, at this time, the generator is in charging state, can not support AC and DC functions. If want to open AC and DC functions, need to press master power button more than 1 second to turn on the generator, screen will be all lit up after generator be turned on. After start-up, connect PV(or charger) to start charging, screen shows input power wattage, at this time, can open AC and DC functions.

**Notice:**

1. If Master Power Button is not turned on, AC button and DC button are in off status, no AC output and DC output.
2. If Master Power Button is turned on, AC button and DC button are still in off status, no AC output and DC output. Need to turn on AC power button and DC power button separately.

**How to charge the product**

**Charge with solar power**

To charge the product, insert the solar charging cable or AC adapter into the input port of the product. The display screen would light up and the charging power would be displayed. But don't care this the wrong way. The product will not turn on by itself when being charged. If the product is previously turned off, it will remain turned off unless you manually turn it on.



**Charge with AC power**

Insert one end of the adapter into wall outlet and insert the other end to the input port of the product. Then, the product will be charged and you can monitor the battery status by checking the battery icon on the LCD screen. The product comes with a built-in advanced control circuit. When the battery is fully charged, it will stop charging itself automatically.



EN-05

**Cold Weather**

Cold weather can influence battery capacity. In sub-zero temperature (<math><0^{\circ}\text{C}</math>), you may be able to discharge the product, but you should not charge it. Otherwise, the battery of the product would be greatly damaged and the capacity may not even be recovered. Low temperature charging protection: When the product is charged at a temperature below  $0^{\circ}\text{C}$ , it will shut off and stop charging itself automatically. The product will reboot and start charging itself when the temperature rise to above  $10^{\circ}\text{C}$ . Low temperature discharging protection: If the product is discharged at a temperature of  $-20^{\circ}\text{C}$ , it will turn off. The product will reboot and turn on output when the temperature rise to above  $-10^{\circ}\text{C}$ .

**FAQ**

**Q1: How to check charging status?**

The battery icon indicates the battery level of this product. The battery level is displayed in 5 segments. When battery is being charged, the icon would flash. When the battery is fully charged, the icon would stop flashing and all 5 segments will be filled.

**Q2: Can this product be used to charge my electronic devices?**

You need to check the power at each output port. For example, the power at AC output port is provided by the built-in inverter of the product, whose maximum continuous output power is 1000W. This means that it is only suitable for electronic device whose required power is no more than 1000W.

**Intelligent Cooling Control**

Cooling fan will start working automatically when the following conditions are met :

1. The load of inverter exceeds 400w.
2. The load of 12V cigarette lighter socket exceeds 80w.
3. The charging power of attached appliances exceeds 100W.

Besides, generator intelligent system will adjust the PV input or AC output power based on the outer case temperature, to keep the outer case at a touchable temperature.

**Note:** Do not use the machine when the cooling fan is broken.

**Frequency Setting**

When the product is powered on, turn on DC output and keep the AC output turned off. Press and hold both DC button & AC button to enter setting mode. Press AC power button to choose inverter AC output frequency. Press and hold both DC and AC power button to exit frequency setting mode. Restart the machine.

EN-06

## Trouble shooting and technical specification

Error	Problem	Solution
E001	Over-voltage protection (battery pack)	Stop charging and start discharging.
E002	Under-voltage protection (battery pack)	Please charge the product in time. Restart the machine once it is fully charged.
E003	Battery failure	Restart the machine and charge it.
E004	Over-temperature protection when discharging the battery.	Wait for a while for it to cool down and then restart the machine.
E005	Under-temperature protection when discharging the battery.	Wait for a while for it to heat up and then restart the machine.
E006	Over-temperature protection when charging the battery.	Wait for a while for it to cool down and then restart the machine.
E007	Under-temperature protection when charging the battery.	Wait for a while for it to heat up and then restart the machine.
E008	Under-voltage protection for the 1st cell.	Please charge the product in time and restart it when fully charged.
E009	Under-voltage protection for the 2nd cell.	Please charge the product in time and restart it when fully charged.
E010	Under-voltage protection for the 3rd cell.	Please charge the product in time and restart it when fully charged.
E011	Under-voltage protection for the 4th cell.	Please charge the product in time and restart it when fully charged.
E012	Busbar fault of inverter due to under-voltage.	Turn off and on the machine.
E013	Over-load protection of inverter.	Check if the output port of inverter is overloaded. Turn off and on the AC output to recover.
E014	Output port of inverter is short-circuited.	Check if the output port of inverter is short-circuited. Turn off and on the AC output to recover.
E015	The heat sink of inverter is overheated.	Wait for it to cool down and then restart the machine.
E016	The temperature of the heat sink is not detected.	Insert the NTC and restart the machine.
E017	Over-voltage protection (PV input).	Disconnect the solar charging cable and then restart the machine.

EN-07

E018	Over-voltage protection (PV output)	Disconnect the solar charging cable, restart the machine and then re-insert the solar charging cable.
E019	Over-temperature protection of heat sink for PV module	The heat sink for PV module overheats. Wait for it to cool down and then charge it.
E020	The temperature of the heat sink for PV module is not detected.	Restart the machine.
E021	Charging protection of battery protection board	Wait for the temperature to return to an acceptable temperature and then start charging.
E022	Battery protection	Disconnect the solar charging cable and restart the machine.
E023	Over-power protection (system)	Check if the total output power is overloaded. Restart the machine.

If you have tried the methods mentioned above, but the problem still cannot be solved. Contact seller customer service team.

## ATTENTION!

If you cannot find the solution for your problem in the chart above, please provide the following information to our customer service team:

1. About the product
  - (1)Serial number
  - (2)Model
  - (3)Displayed information on the screen
  - (4)Description of your problem
  - (5)Does it happen before?
  - (6)In what circumstance does the problem occur?
2. About the solar panel (not included)
  - (1)Manufacturer and model of the solar panel
  - (2)Output voltage of the solar panel
  - (3)Output power of the solar panel
  - (4)MPPT output voltage of the solar panel
  - (5)MPPT output current of the solar panel
  - (6)The number of solar panels and how do you connect the panels

EN-08

## Specifications

Model	EB120	EB150	EB180	EB240
<b>Output Specifications</b>				
Inverter Output	Continuous Output Voltage	100-120Vac, 220-240Vac		
	Rated Frequency	50/60Hz		
	Continuous Output Power	1000W		
	Power Factor	1		
	THDV@0.7R(under nominal voltage)	<5%		
	Over-load protection	1000W ≤ Load < 1200W @ 2Min; 1200W ≤ Load @ 1s;		
	Power Loss (No Load & Turned-off)	<20W		
	Max Efficiency (>70% Load)	88%(100-120Vac), 90%(220-240Vac)		
12V/9A Cigar Light-er Output	Continuous Output Voltage	12.8V(±1V)		
	Continuous Output Current	9A		
	Output Voltage Range	5V±0.3V		
5V USB Output	Max Output Current	3A		
	Note: The maximum output of a single USB port is 3A. The maximum output of 2 USB ports is 3A((top and down).			
Type-C PD Output	Supported Fast Charge	PD Protocol		
	Output Voltage Range	5-20V(±5%) (5V by default)		
	Continuous Output Voltage/Current	(5V/9V/12V/15V)3A(±0.3A), 20V/2.25A(±0.2A)		
<b>Input Specification</b>				
AC Adapter Charger		42V/200W		
PV Max Input Power		500W		
PV Input Voltage Range		16-60Vdc(OVP 73V±2V)		
PV Max Input Current		10A		
MPPT Efficiency		99.5%		
Max Efficiency		>88%		
Solar Charging Mode		MPPT		

EN-09

<b>Battery</b>				
rated voltage	14.8Vdc			
rated capacity	1200Wh	1500Wh	1800Wh	2400Wh
built-in battery cell	Li-ion	Li-ion	Li-ion	Li-ion
battery packing	4S30P	4S41P	4S42P	4S56P
<b>Min Unit</b>				
IP Rating	IP 21			
Operating Environment	Relative Humidity: 10%-90%			
	Operating Temperature: 0-40°C			
Dimensions	293.5*165.4*364.7mm	393.5*165.4*364.7mm	393.5*165.4*364.7mm	493.5*165.4*364.7mm
Net Weight	12.6 KG	16.3 KG	16.5 KG	21.3 KG
Note: When the total output power exceeds 1000W, the DC output will be directly shut down. When the load is less than 30W, the output power would not be displayed. When a high-power appliance is attached to the product, the displayed output power and the actual output power could be different for up to 30W.				

EN-10